

**5" BLADE BANDIT (2508106) includes:**

**C. 5" Blade Bandit**

**D. 5" Bushings - Set of 3 (2508109)**


**E. Shaft Adapter\* (2508114)**

**7" BLADE BANDIT (2508107) includes:**

**A. 7" Blade Bandit**

**B. 7" Bushings - Set of 3 (2508110)**

**E. Shaft Adapter\* (2508114)**

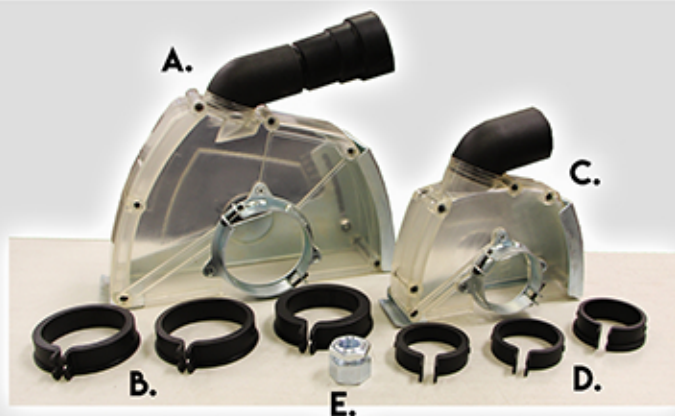


\*Shaft adapter is not required for all types of blades, such as V-Crack blades which have their own hub.



**1** Determine which bushing fits with your angle grinder. Sometimes you will not need a bushing, the Blade Bandit will fit without one.



**2** Place Blade Bandit, and bushing if needed, around the snout of the angle grinder and tighten the two screws to secure the shroud to the grinder.

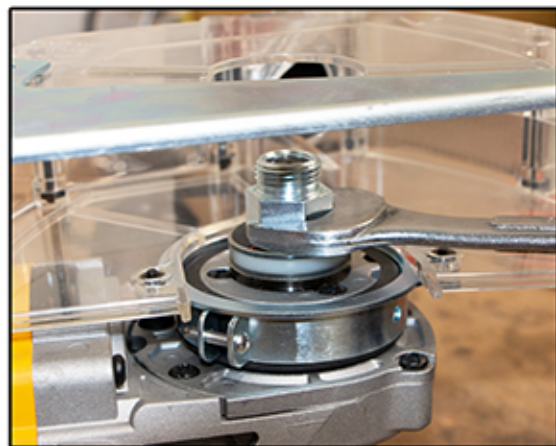

**3** \*When required, screw shaft adapter onto the shaft of the angle grinder.



**4** Place standard blade, tuck point blade, or crack chasing blade over shaft adapter and tighten down with shaft adapter nut.